


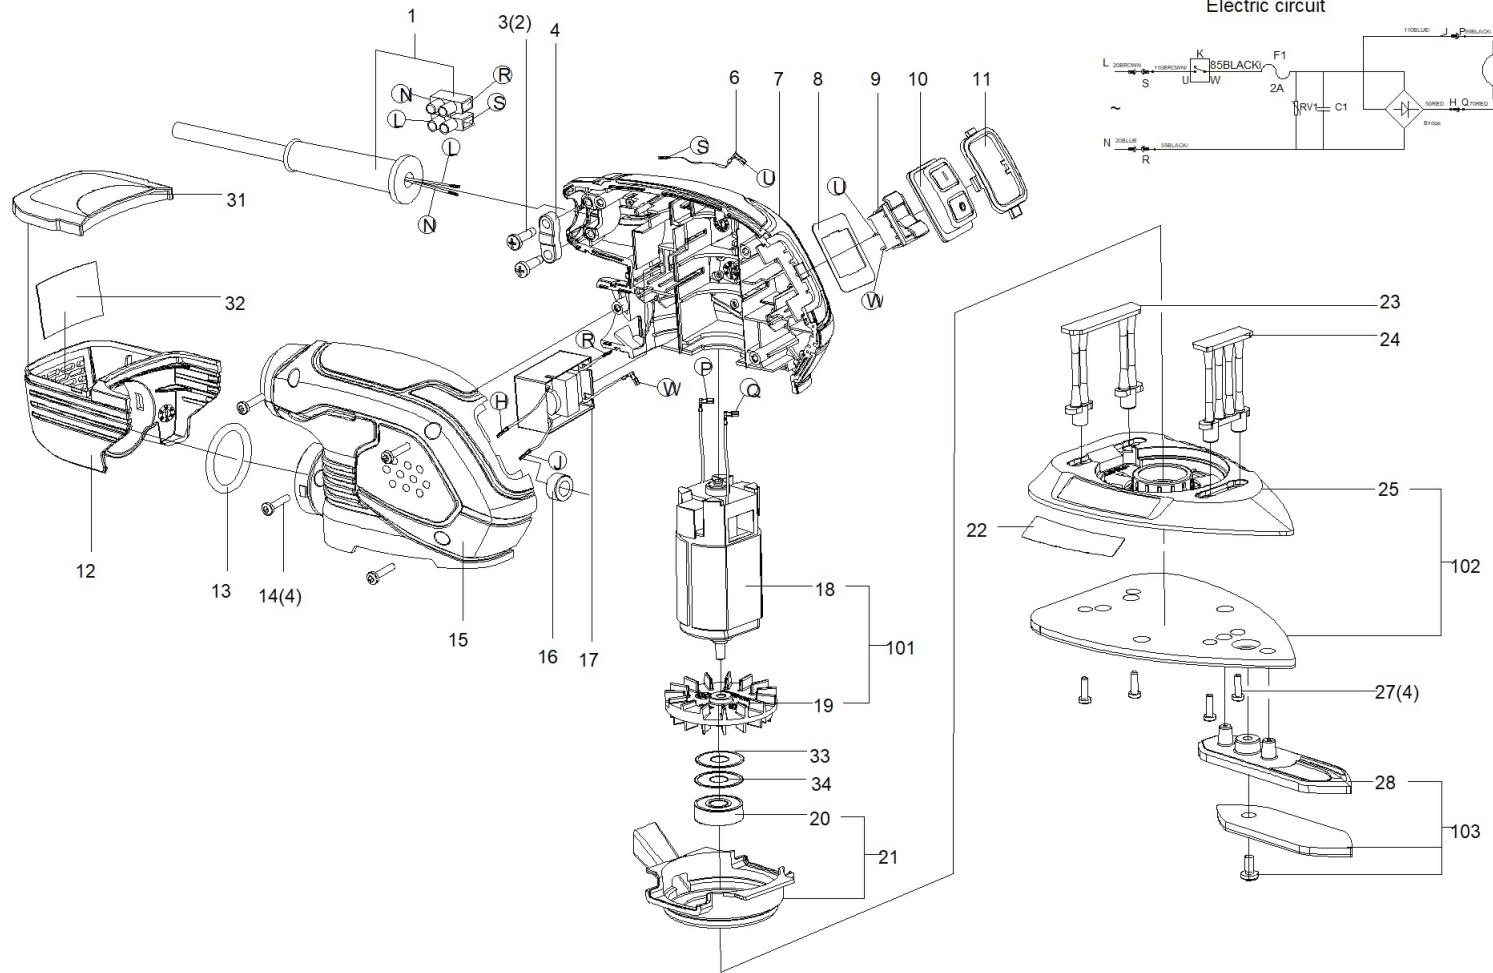

WX648



WX648

	Part No	Description	Substitute parts	Qty
1	50030136	Power Cord		1
3	50027594	Self Tapping Screw		2
4	50024509	Cord Clamp		1
6	50030120	Inner Wire		1
7	50030121	Left/Right Housing		1
8	50030122	Fence		1
9	50016392	Switch		1
10	50016393	Switch Cover	50033326	1
10	50033326	Switch Cover		1
11	50030123	Ornament cover		1
12	50030137	Dust Collector Box Bottom Base		1
13	50013673	O-ring		1
14	50025738	Self Tapping Screw		4
16	50023904	Magnetic ring		1
17	50030124	Power Supply Board		1
18	50030126	Motor		1
19	50030127	Fan		1
20	50003140	Bearing		1
21	50030128	Volute		1
22	50031424	Rated label		1

WX648

	Part No	Description	Substitute parts	Qty
23	50030130	Oscillating Column1		1
24	50030131	Oscillating Column2		1
25	50030133	Base Plate		1
27	50002935	Self tapping screw		4
28	50030135	Figer Base Plate		1
31	50030140	Dust Collector Box Top Base		1
32	50030141	Filter Paper		1
33	50031321	Rubber washer		1
34	50000990	Washer	50001005	1
34	50001005	Washer		1
35	50033142	Felt Seal		1
101	50030125	Motor Set		1
102	50030132	Base Set		1
103	50030134	Figer Base Set		1
104	50033222	Dust Collector Box		1