

Parts no	PP SA CODE	English Name	Qty
1	044000100	Hexagon Socket Head Cap Screw St4.8X13	4
2	044000206	Front Handle	1
3	044000300	Damper Spring	1
4	044000400	Hexagon Socket Head Cap Screw St4.2X16	1
5	044000506	Bottom Half Starter Cove	1
6	044000608	Top Half Starter Cove	1
7	044000700	Nylon Sheath	1
8	044000800	Nylon Rope	1
9	044000906	Starter Knob	1
10	044001000	Starter Spring Plate	1
11	044001100	Starter Spring	1
12	044001200	Starter Reel(Big)	1
13	044001300	Recoil Spring(Small)	1
14	044001400	Starter Reel(Small)	1
15	044001500	Washer	1
16	044001616	Screw St4.8X16	1
17	044001700	Fan Cover	1
18	044001800	Nut*M8 (Thicken)	1
19	044001900	Fly Wheel	1
20	044002000	Vent	1
21	044002100	Hexagon Socket Head Cap Screw M4X20	3
22	044002200	Spring Washer	5
23	044002300	Plain Washer $\Phi 4 \times \phi 9 \times 0.8$	3
24	044002400	Damper Spring	2
25	044002506	Engine Support	1
26	044002600	Hexagon Socket Head Cap Screw St4.2X12	5
27	044002700	Damper Spring	1
28	044002800	Nozzle Plate	1
29	044002900	Hexagon Socket Head Cap Screw St4.2X10	5
30	044003000	Engine Support Cover	1
31	044003100	Oil Seal	2
32	044003200	Ball Bearing	2
33	044003300	Left Crankcase	1
34	044003400	Crankcase Gasket	1
35	044003500	Crankshaft Comp	1
36	044003600	Key 3*10	1
37	044003700	Pin $\Phi 4 \times 10$	2
38	044003800	Right Crankcase	1
39	044003900	Hexagon Socket Head Cap Screw M4X16	9
40	044004000	Oil Pump Nozzle	1
41	044004100	Oil Pump	1
42	044004200	Hexagon Socket Head Cap Screw M4X12	4
43	044004300	Oil Pump Cover	1
44	044004400	Worm Washer $\Phi 10.1 \times \phi 17 \times 1.5$	1
45	044004500	Worm	1
46	044004600	Clutch Needle	1
47	044004700	Clutch Drum	1
48	044005000	Clutch Drum(1/4)	
49	044004800	Clutch Washer	1
50	044004900	Clutch	1
51	044001610	Countersunk Flat Phillips Head Tapping Screw St4.2*12	1

52	044005200	Brake Spring Cover	1
53	044005300	Pin	2
54	044005400	Brake Band	1
55	044005500	Brake Band Buffer Block	1
56	044005600	Brake Spring	1
57	044005700	Brake Lever(Sub)	1
58	044005800	Brake Lever Connecting Block	1
59	044005900	Pin $\Phi 3 \times 12$	1
60	044006000	Tensioner Cover	1
61	044006100	Chain Adjusting Screw	1
62	044006200	Chain Adjusting Nut	1
63	044006300	Adjustin Gear Cover	1
64	044006400	Chain Adjusting Driving Gear	1
65	044006500	Chain Adjusting Driven Gear	1
66	044006600	Brake Lever(Main)	1
67	044006700	Brake Lever Fix Sleeve	1
68	044006800	Top Half Breke Cover	1
69	044006900	Nut*M8	2
70	044007000	Bottom Half Starter Cove	1
71	044007100	Cylinder Gasket	1
72	044007200	Piston	1
73	044007300	Circlip	2
74	044007400	Anti-Wear Gasket	2
75	044007500	Piston Pin	1
76	044007600	Piston Needle	1
77	044007700	Piston Ring	2
78	044007800	Plain Washer $\Phi 4 \times \Phi 10 \times 0.5$	2
79	044007900	Ground Line	1
80	044008000	Off Line	1
81	044008100	Ingition	1
82	044008200	Spark Plug	1
83	044008300	Cylinder	1
84	044008400	Muffler Gasket	1
85	044008500	Muffler	1
86	044008600	Spring Washer	3
87	044008700	Plain Washer $\Phi 5 \times \Phi 9 \times 0.5$	3
88	044008800	Hexagon Socket Head Cap Screw M5*25	3
89	044008900	Intake Pipe Gasket	1
90	044009000	Inlet Pipe	1
91	044009100	Inlet Pipe Ring	1
92	044009200	Carburetor	1
93	044009300	Air Filter Support	1
94	044009400	Hexagon Socket Head Cap Screw M5*40	2
95	044009500	Air Filter	1
96	044009600	Balancer	1
97	044009700	Fuel Pipe Plate	1
98	044009800	Elbow Connector	1
99	044009900	Carburetor Inlet Pipe	1
100	044010000	Oil Pipe Connection	2
101	044010100	Oil Vacuole Outlet Pipe	1
102	044010200	Carburetor Inlet Pipe (Extended)	1
103	044010300	Fuel Filter	1
104	044010400	Clip $\Phi 4.5$	1

105	044010500	Fuel Filter Inlet Pipe	1
106	044010600	Tubing Protection Spring	1
107	044010700	Steel Wire Elastic Hoop	1
108	044010800	Oil Vacuole	1
109	044010906	Front Handle	1
110	044011000	Trigger Spring	1
111	044011108	Trigger	1
112	044011200	Throttle Rod	1
113	044011308	Trigger Control Arm	1
114	044011400	Front Handle Cover	1
115	044011508	Switch (On/Off)	1
116	044011600	Handle Screw Plug Cover	1
117	044011700	Air Filter Cover Lock	1
118	044011806	Spark Plug Cover	1
119	044011900	Pothook For Spark Plug Cover	1
120	044012000	Air Intake Rubber Sleeve	1
121	044012108	Air Filter Cover	1
122	044012200	Pothook For Engine	1
123	044012300	Front Damper Flange	1
124	044012406	Front Damper	1
125	044012500	Front Damper Spring	1
126	044012600	Stepped Tapping Screw	1
127	044012700	Wooden Teeth	1
128	044012800	Chain Catcher	1
129	044012900	Tapping Screw St5.5*13	1
130	044013008	Tank Cap	2
131	044013100	Tank Cap Sealing	2
132	044013200	Oil Pat	2
133	044013300	Oil Pump Inlet Pipe	1
134	044013400	Oil Filter	1
135	044013506	Bar Cover	1
136	044164500	1/4/043"/56Links/ 10"Guide Bar	1
137	044164600	1/4/043"/56Links/ 10"Chain	1
138	044164700	1/4/043"/60Links/ 10"Guide Bar	1
139	044164800	1/4/043"/60Links/ 10"Chain	1
140	044014000	Starter assy	1
141	044014100	Brake cover plate assembly	1
142	044014200	Crankshaft piston assembly	1
143	044014300	Crankcase assembly	1
144	044014408	Fuel lid assy	1